

KEYTOOL PLUS battery replacement steps are as follows:

- 1: Take a picture of the label on the new battery and keep it, install the new battery into the device,
then update the APP software version to the latest.
- 2: Enter KEY TOOL PLUS Main interface -> Setting-> Battery Initialization,
enter the code on the label of the battery.
- 3: Follow the prompts to update, when the pop-up box prompts the battery initialization success,
that means the replacement is completed.

Attention: If you have any questions, you can contact your dealer or APP online customer service.